

USE AND MAINTENANCE
USO E MANUTENZIONE
UTILISATION ET ENTRETIEN
BETRIEB UND WARTUNG
USO Y MANTENIMIENTO

MARINE ENGINES

CURSOR 8 SERIES

Publication edited by
Marketing - Adv. & Promotion
Print L31900011 - 10/05

**IVECO
MOTORS**



CURSOR 8 SERIES

C78 ENS M20

C78 ENT M30

C78 ENT M50

C78 ENT M55

USE AND MAINTENANCE

INTRODUCTION

We would like to thank you for buying an IVECO MOTORS product, and compliment you on your choice of engine.

Before you carry out any operation involving the engine or its fittings, please read the contents of this manual carefully; compliance with the instructions provided in the manual is the best way to guarantee trouble-free, long term operation of the engine.

The contents of this manual refer to the standard configuration of the engine, and the illustrations are purely indicative. Some instructions are provided by giving the sequence of operations to be carried out in order to allow the engine and/or its fittings to perform in a certain way. In some cases they will be dependent on the configuration of the commands and the set-up of the vessel on which the engine is installed; for any points that differ from the contents of this manual, please consult the instructions provided by the Boatbuilder or a specific manual.

The information provided below was current at the date of publication.

The Manufacturer reserves the right to make modifications at any time without prior notice, for technical or commercial reasons or to update the engines to comply with legal requirements in the various Countries.

The Manufacturer declines all liability for any errors or omissions.

Please remember that the IVECO MOTORS Technical Service Network is available to offer you its experience and professional skills, wherever you may be.

CONTENTS

	Page		Page
■ GENERAL INFORMATION	3	Indications for initial start-up or start-up after a long period of inactivity	40
Guarantee	3	■ ENGINE MALFUNCTIONS	41
Spare Parts	3	■ EMERGENCIES ON BOARD	42
Liability	3	■ IN APPENDIX	
Safety	3	Oil viscosity level according to surrounding temperatures	
Engine technical data C 78 ENT M30 / M50 / M55	4		
Engine technical data C 78 ENS M20	6		
Signs	8		
■ USE	9		
Preliminary checks	9		
Starting and stopping the engine	9		
Starting and stopping the engine from the analogue control panel	10		
Recognising alarms	13		
Starting and stopping the engine from the digital control panel	14		
Recognising alarms	16		
Managing the engine from the Relay box	19		
For proper use of the engine	20		
Special warnings	21		
Running in	22		
Refuelling	23		
■ CONTROLS AND MAINTENANCE	24		
Maintenance personnel	24		
Accident prevention	24		
Frequency	25		
Requirements	27		
How to proceed	27		
Moving the engine	38		
Disposal of waste	38		
■ LONG PERIODS OF INACTIVITY	39		
Preparing the engine for a long period of inactivity	39		
Restarting the engine after a long period of inactivity	39		

■ GENERAL INFORMATION

GUARANTEE

In order to ensure that your engine gives the best possible performance and to take advantage of the IVECO MOTORS guarantee, you must follow the indications provided in this publication with great care; failure to do so may result in invalidation of the guarantee.

SPARE PARTS

Always use Original IVECO MOTORS Spare parts. This is essential to keep the engine in original running order.

The use of non-original spare parts will not only invalidate the guarantee, but will mean that IVECO MOTORS will not be considered liable in any way during the whole working life of the engine.

LIABILITY

The Manufacturer will only be considered liable subject to performance of the control and maintenance operations indicated and described in this manual; to this effect, proof that these operations have been performed must be provided. Any special maintenance operations that may be necessary must be carried out by qualified technicians from authorised Workshops in the IVECO MOTORS Network, using the instruments and equipped provided for the purpose.

SAFETY

The following information is intended to encourage caution when using the engine, so as to avoid damage to persons or property as a result of improper or incorrect behaviour.

- ❑ The engines must only be used for the purposes indicated by the Manufacturer.
- ❑ Any tampering, modification and use of non-original spare parts may compromise proper operation of the engine and safe navigation; **never, under any circumstances** make modifications to the wiring and to the units equipping the engine, or connect them to other power systems.
- ❑ Pay particular attention to moving parts of the engine, to high temperature components and to circuits containing pressurised fluids; its electrical equipped houses electrical currents and voltage.
- ❑ The exhaust fumes produced by the engine are bad for your health.
- ❑ The engine must only be moved using suitable lifting tackle, making use of the U-bolts provided on the engine for that purpose.
- ❑ The engine must not be started up and used until the vessel in which it installed has satisfied all necessary safety requirements, or until the vessel has been guaranteed to comply with local laws and regulations.
- ❑ The operations required to guarantee the best possible use and preservation of the engine must only be carried out by persons of proven experience, equipped with tools considered suitable by IVECO MOTORS.

For the purpose of safety, further recommendations are given in the chapter CONTROLS AND MAINTENANCE.

ENGINE TECHNICAL DATA C78 ENT M30/M50/M55

The technical code and serial number are indicated on a plate, which is located on different parts of the engine, according to the model: flywheel casing, tappet cover, coolant tank.

Code	C78 ENT M30 / M50 / M55
Engine family	F2B
Cycle	4-stroke diesel
Number and arrangement of cylinders	6, in line
Bore x stroke	115 x 125 mm
Total displacement	7.800 cm ³
Air system	Supercharged aftercooled (TCA or TAA)
Injection type	Direct
Engine direction of rotation	EUI electronically managed
Engine direction of rotation	Anticlockwise (seen from flywheel side)
Dry weight	910 kg

Electrical system	24 V
Accumulator/s capacity	120 Ah or above
discharge current	900 A or above

Available settings (*) C78 ENT M30

C	243 kW (330 CV) @ 2000 rpm
D	220 kW (300 CV) @ 2000 rpm

Available settings(*) C78 ENT M50

A1	368 kW (500 CV) @ 2600 rpm
A2	331 kW (450 CV) @ 2600 rpm
B	290 kW (400 CV) @ 2600 rpm
C	257 kW (350 CV) @ 2600 rpm


Available settings (*) C78 ENT M55

A1	405 kW (550 CV) @ 2600 rpm
A2	368 kW (500 CV) @ 2600 rpm
B	331 kW (450 CV) @ 2600 rpm
C	294 kW (400 CV) @ 2600 rpm

(*) Net power to the flywheel in compliance with ISO 3046-1. Test conditions: T 25 °C; atmospheric pressure 100 kPa; relative humidity 30%.


WARNING

Any alteration of the above mentioned characteristics, in particular modification of the data stored in the injection system electronic units or the characteristics of the engine and its fittings, is strictly prohibited, penalty invalidation of the guarantee and absence of all liability on the part of IVECO MOTORS.

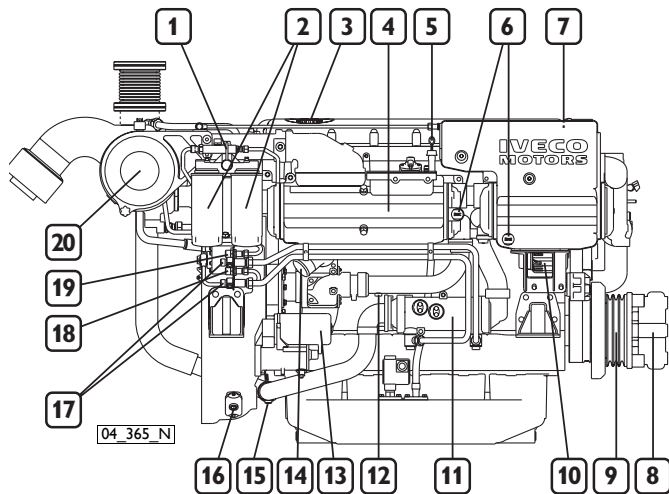

CURSOR C78 ENT M30 / M50 / M55 engine

1. Fuel filters switchover (opt.) - 2. Switchable filters or fuel filter (opt.) - 3. Oil filler cap - 4. Sea water-air heat exchanger - 5. Oil dipstick (alternatively on other side) - 6. Removable anodes - 7. Coolant filler cap - 8. Power take-off coupling connector (opt.) - 9. Power take-off pulley (opt.) - 10. Alternator - 11. Marine gear oil heat exchanger (opt.) - 12. Sea water drainage plug - 13. Electrical starter motor - 14. Sea water pump inlet - 15. Sea water drainage plug - 16. Flywheel turning tool insertion point - 17. Connectors for marine gear oil heat exchanger (opt.) - 18. Engine fuel inlet connector - 19. Fuel outlet connector to tank - 20. Air filter.

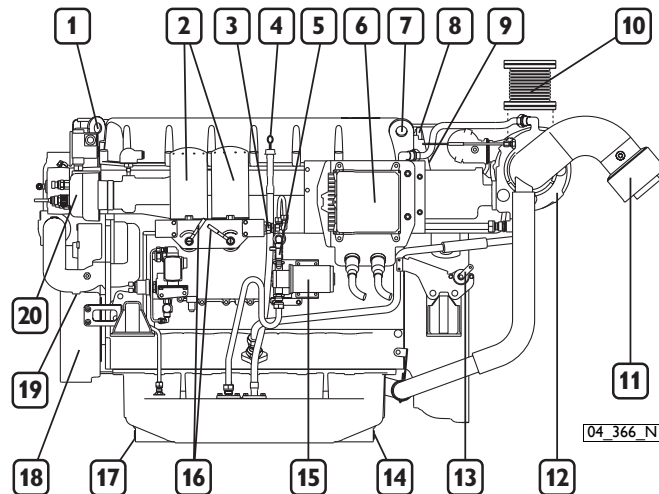

CURSOR C78 ENT MM30 / M50 / M55 engine

1. Lifting U-bolt - 2. Oil filters - 3. Pre-lubrication check valve (opt.) - 4. Oil dipstick (alternatively on other side) - 5. Lubricant oil filler and drainage tap (opt.) - 6. Electronic control unit - 7. Lifting U-bolt - 8. Oil vapour filter blocked indicator - 9. Position of oil vapour filter cover - 10. Exhaust gas discharge to chimney (opt.) - 11. Exhaust gas and sea water discharge (opt.) - 12. Turbo compressor - 13. Accelerator voltage divider lever - 14. Lubricant oil discharge plug - 15. Electric pump for transfer of lubricant oil (opt.) - 16. Oil filter exclusion levers (opt.) - 17. Lubricant oil discharge plug - 18. Auxiliary member pulley casing - 19. Coolant discharge plug - 20. Thermostat valve location.

ENGINE TECHNICAL DATA C78 ENS M20

The technical code and serial number are indicated on a plate, which is located on different parts of the engine, according to the model: flywheel casing, tappet cover, coolant tank.

Code	C78 ENS M20
Engine family	F2B
Cycle	4-stroke diesel
Number and arrangement of cylinders	6, in line
Bore x stroke	115 x 125 mm
Total displacement	7.800 cm ³
Air system	Supercharged
Injection type Direct	EUI electronically managed
Engine direction of rotation	Anticlockwise (seen from flywheel side)
Dry weight	890 kg


Electrical system	24 V
Accumulator/s capacity	120 Ah or above
discharge current	900 A or above

Available settings (*)	C78 ENS M20
C	169 kW (230 CV) @ 2000 rpm
D	147 kW (200 CV) @ 2000 rpm

(*)Net power to the flywheel in compliance with ISO 3046-1. Test conditions: T 25 °C; atmospheric pressure 100 kPa; relative humidity 30%.


WARNING

Any alteration of the above mentioned characteristics, in particular modification of the data stored in the injection system electronic units or the characteristics of the engine and its fittings, is strictly prohibited, penalty invalidation of the guarantee and absence of all liability on the part of IVECO MOTORS.

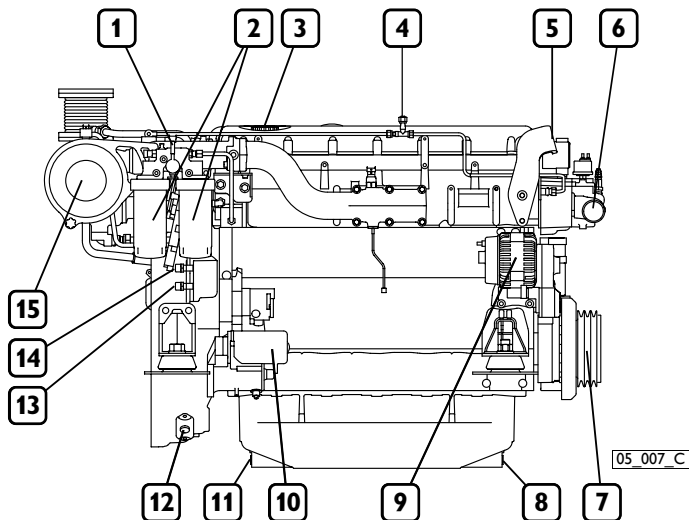

CURSOR C78 ENS M20 engine

1. Fuel filters switchover (opt.) - 2. Switchable filters or fuel filter (opt.) - 3. Oil filler cap - 4. Coolant circuit degassing connector - 5. Lifting U-bolt - 6. Outlet to engine coolant heat exchanger - 7. Power take-off pulley (opt.) - 8. Lubricant oil discharge plug - 9. Alternator - 10. Electrical starter motor - 11. Lubricant oil discharge plug - 12. Flywheel turning tool insertion point - 13. Engine fuel inlet connector - 14. Fuel outlet connector to tank - 15. Air filter.

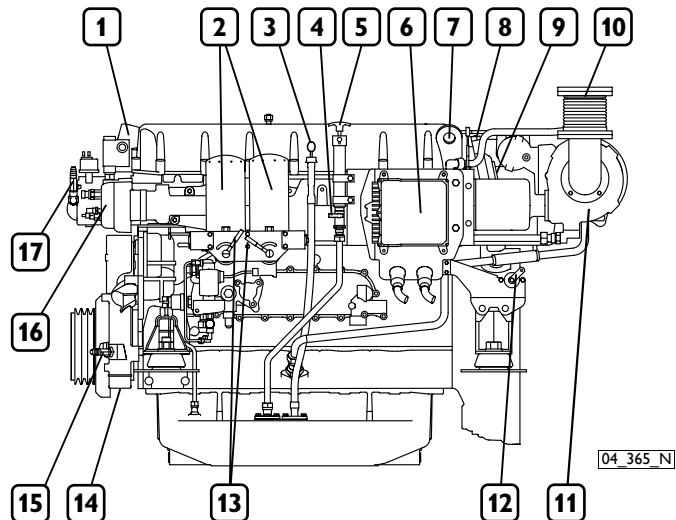

CURSOR C78 ENS M20 engine

1. Lifting U-bolt - 2. Oil filters - 3. Oil dipstick (alternatively on other side) - 4. Lubricant oil drainage tap - 5. Manual lubricant extraction pump - 6. Electronic control unit - 7. Lifting U-bolt - 8. Oil vapour filter blocked indicator - 9. Position of oil vapour filter cover - 10. Exhaust gas discharge - 11. Turbo compressor - 12. Accelerator voltage divider lever - 13. Oil filter exclusion levers (opt.) - 14. Engine coolant inlet - 15. Water-heater system manifold - 16. Thermostat valve location - 17. Water-heater system manifold.

SIGNS

Certain warning signs are affixed to the engine, and their meanings are indicated below.

NOTE: The signs with an exclamation mark on them underline a potential **danger**.



Lifting point (engine only).



Fuel Cap
(on the fuel tank, if there is one).



Oil Cap.



Oil dipstick.



Danger of burning:
Expulsion of hot water under pressure.



Danger of burning:
Presence of high temperature parts.



Danger of fire:
Fuel present.



Danger of impact or catching
on moving parts:
Presence of fans, pulleys, belts or the like.

■ USE

PRELIMINARY CHECKS

Before starting the engine each time:

- ❑ Make sure that the sea-water inlet valve is open. Operation of the sea water pump without water would cause irreparable damage to the internal rotor within a very few seconds.
- ❑ Check the level of technical fluids (fuel, engine oil and coolant).

CAUTION!



Before starting the engine, make sure that no combustible vapours or gasses are present in the engineroom.

STARTING AND STOPPING THE ENGINE

For vessels equipped with instrument panels that are not manufactured by IVECO MOTORS

The start-up and shut-down operations described below apply to an on-board control panel manufactured by IVECO MOTORS; if the vessel is fitted with an instrument panel that has been customised by the Boatbuilder or Fitter, these operations may vary according to the various choices made during construction. In these cases, follow the start-up/shut-down sequence and use the instrument panel description provided by the Boatbuilder on specific documentation.

For engines fitted with an electric pre-lubrication system


Press the engine electric system power switch to start the pre-lubrication function, for which the relevant indicator light will turn on. Start-up of the engine, as described in the following pages, must only take place after allowing a sufficient amount of time to complete pre-lubrication, or waiting for the indicator light to go out.

STARTING AND STOPPING THE ENGINE FROM THE ANALOGUE CONTROL PANEL

Procedure for start-up from the main IVECO MOTORS control panel (supplied on demand)

Make sure that the electrical switch indicating ENGINE ROOM - BRIDGE on the Relay Box unit (normally located in the engine room) is in the BRIDGE position, then proceed as follows:


1. Lift the protective cover over the key switch (8), insert the key and turn it to the right to position **8B**.
2. Make sure that the analogue instruments are showing values that conform with the relevant physical parameters (temperature, battery voltage and oil pressure).
3. Wait for the beeper to stop sounding and for the alarm indicator lights on the indicator module (5) to switch off, with the exception of the "alternator recharge" and "low oil pressure" indicators. At the same time, check that the indicator test has been performed successfully (information on how to interpret this test and indications on the module are given in the relevant paragraph).
4. Turn the key to position **8C**; once the engine has started, release the key and do not accelerate.
5. Make sure that the analogue instruments are showing values that conform with the relevant physical parameters (temperature, battery voltage and oil pressure).
6. If the engine does not start, after releasing the key it will only be possible to turn it back to the start position after first returning the switch to the rest position **8A**.

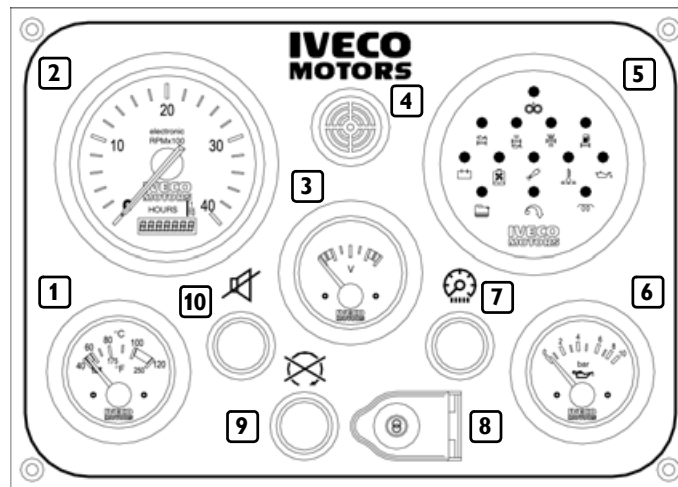

04_354_N

1. Coolant temperature indicator - 2. Rev counter and hour counter - 3. Voltmeter - 4. Beeper - 5. Indicator and alarm module - 6. Engine oil pressure indicator - 7. Control panel instrument light switch - 8. Key switch to start/stop the engine - 9. Button to stop the engine - 10. Button to disable the beeper.


Detail of the key switch



04_356_N

Procedure for start-up from IVECO MOTORS secondary or fly-bridge control panel (supplied on demand)

- 1 **Enable the secondary control panel, by turning the key switch on the main panel to position 8B** (see requirements and procedure given in previous paragraph).
2. Wait for the beeper to stop sounding and for the alarm indicators on the indicator module (5) to switch off, with the exception of the "alternator malfunction" and "low oil pressure" indicators. At the same time, check that the indicator test has been performed successfully (information on how to interpret this test and indications on the module are given in the relevant paragraph).
3. Press the green button (5) and release it when the engine has started.
4. Check that the rev indicator shows a plausible value.

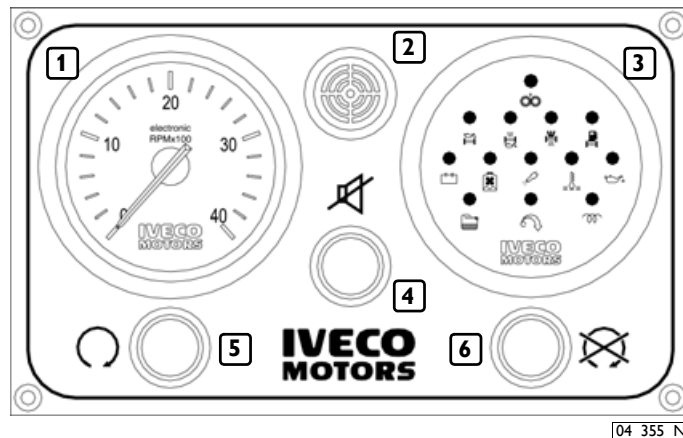

1. Rev counter and hour counter - 2. Beeper - 3. Indicator and alarm module - 4. Button to disable the beeper - 5. Engine start button - 6. Engine stop button.

Stopping the engine

Before stopping the engine it is recommended you run it for a few minutes at minimum speed with no load; this will allow the temperature to drop evenly and will avoid harmful thermal shocks.

- A. The engine is normally stopped from the main IVECO MOTORS control panel by turning the key switch to the rest position **8A** or by turning a similar command on the customised control panel.
- B. The IVECO MOTORS secondary control panel is stopped by pressing the red button (6) on the control panel.

The main IVECO MOTORS control panel for engines equipped with an “**excited**” device (on request or as prescribed by the Certification Body), is stopped by pressing the red button (9).

To re-start the engine from the main control panel:

1. Return the key switch to the rest position **8A** to reset all the on-board control panel functions.
2. Proceed as described.

To re-start the engine from the secondary control panel:

1. Make sure that the panel has been enabled (key switch on the main control panel turned to position **8B**).
2. Press the green button (5) and release it when the engine has started, making sure that the rev indicator is showing a plausible reading.

RECOGNISING ALARMS

IVECO MOTORS on-board control panels with analogue instruments are fitted with an electronic module that includes the indicator lights and the interface, timer and alarm storage circuits.

The figure illustrates the dial and the key indicates the meaning of the alarm signals sent by all the indicator lights; some types of engine and relevant equipped only make some of the above mentioned functions available.


If the Boatyard uses different technical options there may be changes to the above.

Operation

When the key switch is turned to position **8B** the signals and alarms module will perform an efficiency test on all the indicator lights, lasting 5 seconds, with the exception of the "Pre-lubrication", "Pre-post heating", "EDG system malfunction" indicators, and simultaneously the beeper sounds.

It is possible to stop the beeper before the end of the test, by pressing the relevant button.

During start-up and for the following 15 seconds, all alarm functions are disabled; after this period, each alarm detected by the sensors provided on the engine will result in the relevant indicator flashing and a simultaneous warning sound from the beeper. If the beeper is disabled by pressing the relevant button, the indicator light will turn on without flashing and the alarm will be stored until the engine is next stopped.

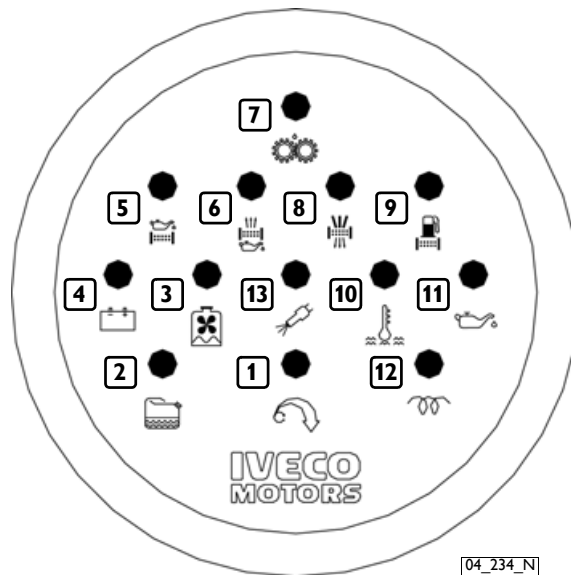

1. Maximum allowed rotation speed exceeded (on request)
2. Water in the fuel pre-filter - *
3. Engine coolant level low -
4. Alternator malfunction - *
5. Oil filter blocked - *
6. Air filter blocked - *
7. Pre-lubrication in progress -
8. Air filter blocked - *
9. Fuel filter blocked -
10. Coolant temperature high -
11. Oil pressure low - *
12. Pre-post heating -
13. Malfunction in EDC electronic injection system.


*Alarm functions not available with standard setup.

STARTING AND STOPPING THE ENGINE FROM THE DIGITAL CONTROL PANEL

Procedure for start-up from the main IVECO MOTORS control panel (supplied on demand)


Make sure that the electrical switch indicating ENGINE ROOM - BRIDGE on the Relay Box unit (normally located in the engine room) is in the BRIDGE position, then proceed as follows:

1. Lift the protective cover over the key switch, insert the key and turn it to the right to position **8B**.
2. Make sure that the instruments with analogue displays are showing values that conform with the relevant physical parameters.
3. Wait for the beeper to stop sounding and for the alarm indicator lights to switch off, with the exception of the "Alarm malfunction" and "Low oil pressure" indicators. At the same time, check that the indicator test has been performed successfully (see the section on RECOGNIZING ALARMS).
4. Turn the key to position **8C**; once the engine has started, release the key and do not accelerate.
5. Make sure that the instruments with analogue displays are showing values that conform with the relevant physical parameters (temperature, battery voltage and oil pressure).
6. If the engine does not start, after releasing the key it will only be possible to turn it back to the start position after first returning the switch to the rest position **8A**.

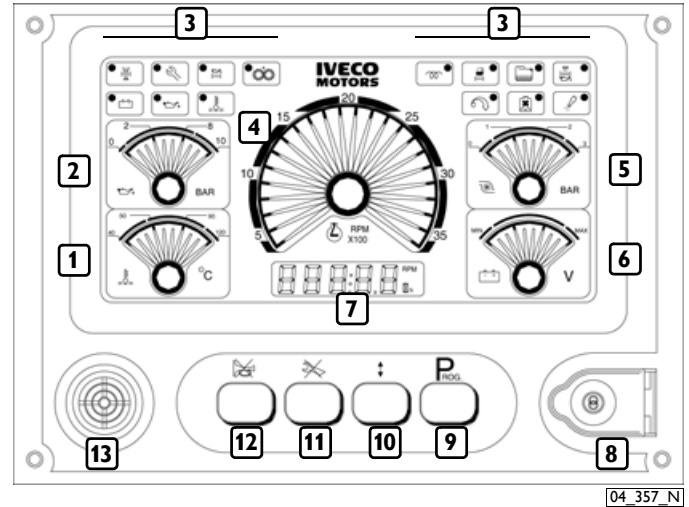

1. Engine coolant temperature indicator - 2. Lubrication circuit pressure indicator - 3. Service and alarm signals - 4. Rev counter - 5. Supercharged air pressure indicator - 6. Voltmeter - 7. Alfa-numeric display - 8. Key switch to start/stop the engine - 9. Accessory function programming button - 10. Button used to scroll through and select additional information - 11. Button to reset the "planned maintenance" indicator - 12. Button to disable the beeper - 13. Beeper.


Detail of the key switch



04_356_N

Procedure for start-up from IVECO MOTORS secondary or fly-bridge control panel (supplied on demand)

1. Enable the secondary control panel, by turning the key switch on the main panel to position **8B** (see instructions in previous paragraph).
2. Wait for the beeper to stop sounding and for the alarm indicator lights to switch off, with the exception of the “Alarm malfunction” and “Low oil pressure” indicators. At the same time, check that the indicator test has been performed successfully (see the section on RECOGNIZING ALARMS).
3. Press the green START button (11) and release it when the engine has started, making sure that the instruments with analogue displays are showing values that conform with the new physical parameters.

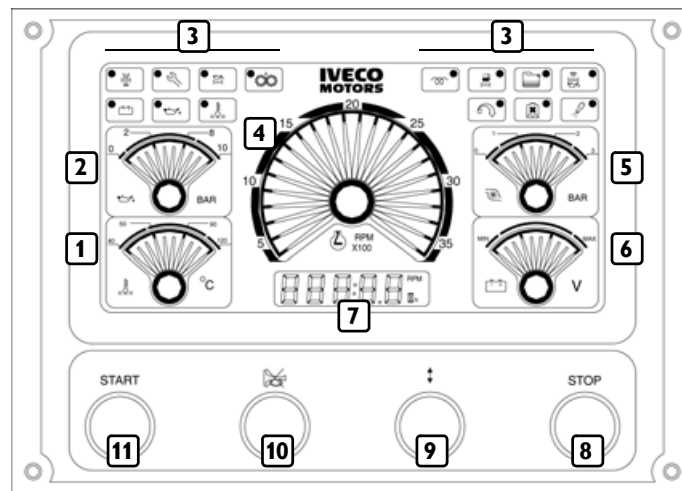

04_358 N

1. Engine coolant temperature indicator - 2. Lubrication circuit pressure indicator - 3. Service and alarm signals - 4. Rev counter - 5. Supercharged air pressure indicator - 6. Voltmeter - 7. Alpha-numeric display - 8. Button to stop the engine - 9. Button used to scroll through and select additional information - 10. Button to disable the beeper - 11. Engine start button.

Stopping the engine

Before stopping the engine it is recommended you run it for a few minutes at minimum speed with no load; this will allow the temperature to drop evenly and will avoid harmful thermal shocks.

- A. **From the main IVECO MOTORS control panel:** turn the key switch to the rest position **8A**.
- B. **From the secondary IVECO MOTORS control panel:** press the red STOP button (8).

To re-start the engine from the main control panel:













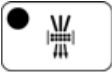

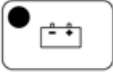1. Return the key switch to the rest position **8A** to reset all the on-board control panel functions.
2. Proceed as indicated in the relevant paragraph.

To re-start the engine from the secondary control panel:

1. Make sure that the panel has been enabled (key switch on the main control panel turned to position **8B**).
2. Press the green START button (11) and release it when the engine has started, making sure that the instruments with analogue displays are showing plausible values.

RECOGNISING ALARMS

The following shows the meaning of the symbols given alongside each of the indicator lights on the main and secondary control panels; some types of engine and relevant equipped only make some of the above mentioned functions available. If the Boatyard uses different technical options there may also be changes to the above.

	* Air filter blocked		* Oil vapour filter blocked
	Maintenance interval expired		Alternator malfunction
	* Oil filter blocked		Oil pressure low
	* Pre-lubrication in progress		Coolant temperature high
	* Pre-post heating		Over-revs
	* Fuel filter blocked		* Coolant level low
	Water in the fuel filter		EDC engine control system malfunction

04_359_N

* Alarm functions not available with standard setup.

Operation

When the key switch is turned to position **8B** the efficiency test procedure will be activated for 5 seconds on all the indicator lights, with the exception of the ones for "Pre-lubrication", "Pre-post heating", "EDC system malfunction"; simultaneously the beeper sounds; It is possible to stop the beeper before the end of the test, by pressing the relevant button.

During start-up and for the following 15 seconds, all alarm functions are disabled; after this period, each alarm detected by the sensors provided on the engine will result in the relevant indicator flashing and a simultaneous warning sound from the beeper. If the beeper is disabled by pressing the relevant button, the indicator light will turn on without flashing and the alarm will be stored until the engine is stopped.


Alpha-numeric display

This provides the following information:

- engine running speed
- total running hours (see note A)
- exhaust gas temperature (on request)
- instant fuel consumption (see note B)

The information required is selected by pressing the "Scroll select" button on both the control panels, main and secondary.

Detail of the main control panel

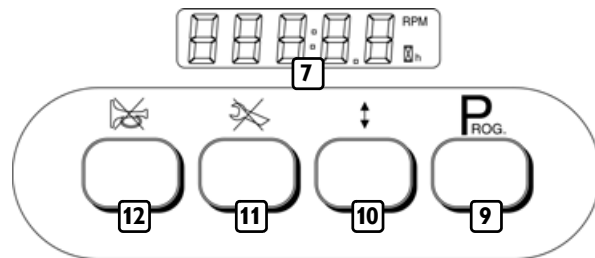

7. Alpha-numeric display - 9. Accessory function programming button - 10. Button used to scroll through and select additional information - 11. Button to reset the "planned maintenance" indicator - 12. Button to disable the beeper.

- (A)The control panel's internal electronics are programmed to count the working hours and issue warnings when the time limit for ordinary maintenance operations expires; this function requires that the counter be reset after each maintenance operation, which is carried out from the main control panel as follows:
- Pressing and holding the "Prog" (9) and "Scroll select" buttons (10), turn the key switch from position **8A** to position **8B** and wait for the display to show the pre-set value (e.g.: 600 hours). Release the buttons and press the "Prog" (9) button again once only to start the new count.

If the set value does not correspond with the one foreseen for the type of oil being used (see requirements in the paragraphs on REFUELLING and FREQUENCY) proceed as follows:

- After displaying the value in hours set previously, release the buttons and press just the "Scroll select" button (10) repeatedly until the prescribed value (as indicated in the section FREQUENCY) is shown and flashes, after which press the "Prog" button (9) to confirm the value and start the new count.

(B)The information on instant fuel consumption requires the maximum input value to be correctly programmed with respect to the performance of the engine fitted on the vessel; to check this, proceed as follows:

- Press and hold the "Prog" button (9) until the display shows the maximum input value (e.g.: 195 mg/trk), then release the button and compare the value with the ones provided in the table below.
- If the value does not correspond, modify it by pressing the "Scroll select" button (10) repeatedly until the prescribed value is displayed (flashing).
- Press and hold the "Prog" button (9) until the display shows the engine running speed, which indicates that the value has been stored.

If the programming operations have not been carried out correctly the display will indicate "P.Err"; in this case, it will be necessary to repeat the procedure from the beginning.

C78 ENS M20

Maximum power (CV) Maximum input (mg/strk)	
230	
200	

C78 ENT M30

Maximum power (CV) Maximum input (mg/strk)	
330	
300	

C78 ENT M50

Maximum power (CV) Maximum input (mg/strk)	
500	195
450	179
400	170
350	154


C78 ENT M55

Maximum power (CV) Maximum input (mg/strk)	
550	218
500	218
450	218
400	210

MANAGING THE ENGINE FROM THE RELAY BOX

The engine fittings include a unit, known as the “Relay box” and normally installed in the engine room, using which it is possible to manage the following functions:

- Starting and stopping.
- Selection of the control panel: bridge or engine room.
- Increase and decrease of the engine speed.
- Self-diagnosis (only to be used by Technical Service Network staff).

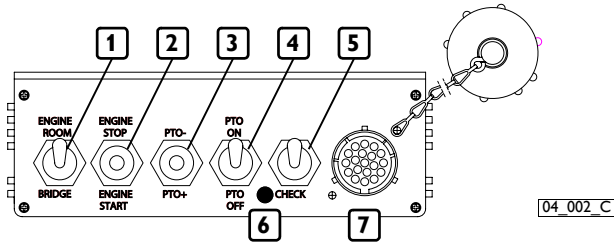

1. Control panel selector - 2. Start/stop command - 3. Manual accelerator - 4. Enable accelerator button (3) - 5. Blink code emission button - 6. Led indicating EDC and blink code malfunction - 7. Connector for diagnosis instrument.

CAUTION!



Never switch the ENGINE ROOM / BRIDGE selector when the engine is turning.

Start-up procedure

1. Turn switch **1** to the ENGINE ROOM position to enable the adjacent START-STOP button (2); **this operation disables all the on-board control panel functions on the bridge and fly-bridge.**
2. Press button **2** in the ENGINE START position until the engine starts, then release it.

Running speed management procedure

1. Turn switch **4** to the PTO ON position;
 2. To accelerate: press and hold button **3** in the PTO+ position; release it on achieving the required engine speed.
 3. To decelerate: press and hold button **3** in the PTO- position; release it on achieving the required engine speed.
- Once the required running speed has been reached, it will be maintained until the switch **4** is turned to the PTO OFF position or the engine is stopped.

Stopping procedure

1. Press button **2** in the STOP position until the engine has come to a complete stop.
2. Return switch **1** to the BRIDGE position to allow use of the commands on the on-board control panels and prevent use of the START-STOP button in the "Relay box".

Self-diagnosis procedure

Use of the CHECK button (5) enables Technical Service Network staff to obtain the self-diagnosis information stored in the electronic Unit controlling the engine; the LED indicator **6** indicates the code by emitting flashes of light.

FOR PROPER USE OF THE ENGINE

- ❑ Do not continue to press the starter, when the engine has started.
- ❑ Do not remain in dock while waiting for the engine to warm up, but after starting, commence navigation at low speed; the working temperature will be reached properly with the engine running at medium speeds.
- ❑ Do not operate the engine at minimum speed for long periods, as this encourages the production of harmful exhaust and does not guarantee optimum performance.
- ❑ The engine speed must be increased and decreased gradually, to allow regular combustion and proper operation of all engine components.
- ❑ The maximum cruising speed must not be more than 90% of the speed corresponding to maximum power (see section on ENGINE TECHNICAL DATA).
- ❑ During navigation, check that:
 - The engine coolant temperature does not reach the alarm threshold.
 - The oil pressure remains within normal values.

SPECIAL WARNINGS

Coolant temperature high

If the temperature indicated on the instrument is considered too high, or if the alarm is displayed, reduce speed and return to port to check the state of the sea water intake and cooling system circuits; also check and have checked:

- tension of the water pump and alternator command belts.
- operation of the thermostat valve.
- whether or not the heat exchangers are clean.

CAUTION!



When the engine is warm, a pressure liable to cause hot liquid to be expelled with extreme violence is created within the cooling circuits. This results in a danger of burning. Only open the coolant tank cap if strictly necessary, and only when the engine is cold.

Low lubricant pressure

If the pressure indicated by the instrument is considered insufficient, or if the "low oil pressure" indicator lights up, stop the engine and check the oil level. Top up if necessary (see CONTROL AND MAINTENANCE section).

If the condition persists, return to port at low speed and contact an Authorised Service Centre.

Water in the fuel pre-filter

It is a good rule to drain the water from the filters, before the relevant indicator comes on.

Avoid using the engine with the fuel tank only a small reserve of fuel; this encourages the formation of condensation and makes it more likely you will suck up dirt or air, resulting in engine stoppage.

CAUTION!



When refuelling, always pay great care to ensure that no solid or liquid pollutants enter the fuel tank; you must also remember that smoking and live flames are prohibited when refuelling.

Air filter blocked and exhaust circuit inefficient

Inspect the cleanliness of the air intakes and discharge pipes on a regular basis. The maintenance intervals indicated in this manual only take into account the performance of engine components, and not any additional fittings installed by the Boatbuilder and any external events.

CAUTION!



Visually check that the exhaust circuit is not blocked or damaged, so as to prevent dangerous fumes within the vessel.

Alternator malfunction

Check it or have it checked periodically for cleanliness, wear and proper tensioning of the drive belt.

CAUTION!



The drive members are located under protective casings. These must only be removed when the engine is not turning.

Irregularities in the electrical system

Periodically check, particularly during the winter, to ensure that the batteries are clean and in full working order, checking and topping up as indicated in the section CONTROLS AND MAINTENANCE; always comply with the warning notices provided. If it should be necessary to replace them, always comply with the characteristics indicated in the section GENERAL INFORMATION.

RUNNING IN

Thanks to modern engine construction technology, no particular running in procedure is required. However, it is recommended that, for the first 50 hours, you do not use the engine at high power for long periods.

REFUELLING

Parts to be supplied	C78 ENT - C78 ENS litres (kg)
Cooling circuit ⁽¹⁾	40 ^(*)
Lubrication circuit ⁽²⁾ total capacity ⁽³⁾	31 (28)
Periodic changing: oil sump at minimum level	18 (16,3)
oil sump at maximum level	25 (22,7)
Fuel tank ⁽⁴⁾	-

(1) Use a mixture of water and 50% PARAFU 11 even during the summer months. As an alternative to PARAFU 11, you can use another product that complies with international specifications SAE J 1034.

(2) Use lubricants that comply with international specifications ACEA E3 - E5 (high power engines), API CF - CH4 (associated with fuels with a percentage sulphur < 0.5%), MIL - L - 2104 F.

The viscosity level of oil to be used depending on surrounding temperatures is given in the table provided in the appendix.

Oil consumption is considered acceptable when it reaches a maximum of 0.5% of fuel consumption.

(3) The amounts indicated refer to initial refuelling, and include filling the engine, sump and filter.

(4) Only use normal commercial diesel fuel (EN 590 standards). Do not use additives. Do not use fuels derived from the synthesis of organic substances and vegetable oils (Biodiesel).

(*) With the exception of the C78 ENS M20 engine.

WARNING

Refuelling from drums or tanks may result in pollution of the diesel fuel, with the risk of damage to the injection system; if necessary, filter the fuel in a suitable manner or allow sedimentation of the impurities before refuelling.

Low temperature diesel

EN590 specifications distinguish different classes of diesel fuel, identifying the characteristics of those best suited to low temperatures. It is entirely up to the Oil companies to comply with these regulations, which foresee that fuels suited to the climatic and geographic conditions of the various Countries be distributed.

Filling up with marine gear oil

For the amount and types of oil to be used in the marine gear, please see the manual provided by the Manufacturer.

■ CONTROLS AND MAINTENANCE

MAINTENANCE PERSONNEL

The engine control and maintenance operations described in the following chapter require training, experience and compliance with current safety regulations; for this reason they must be carried out by special technicians, as indicated below.

Controls: by workshop technicians or the vessel user if necessary.

Periodic maintenance: by qualified personnel equipped with suitable equipped and adequate means of protection. Operations marked by the key symbol (see illustration).



Special maintenance: by qualified Authorised Service Centre staff with specific technical information and equipped. Operations marked by the key symbol (see illustration).



The Authorised Service Centres are the ones in the IVECO MOTORS Technical Service Network.

ACCIDENT PREVENTION

- Always wear heavy-duty footwear and overalls.
- Never wear loose, flapping garments, rings, bracelets and/or necklaces in the vicinity of engines or moving parts.
- Always wear protective gloves and goggles when:

- filling up batteries with acid solution
- refuelling with inhibitors or antifreeze
- replacing or topping up lubricant (hot engine oil may cause burns and scalds. Only carry out these operations when the oil has dropped to a temperature of below 50°C).
- When working in the engine compartment, pay particular attention to how you move, to avoid contact with moving parts or high temperature components.
- Wear goggles and use high pressure air jets (maximum air pressure used to clean is 200 kPa (2 bar, 30 psi, 2 kg/cm²).
- Wear a protective helmet when working in an area where there are suspended loads or systems installed at head-height.
- Use protective hand cremes.
- Immediately replace wet overalls.
- Always keep the engine clean, removing oil, grease and coolant stains.
- Store cloths in flame-proof containers.
- Do not leave foreign bodies on the engine.
- Use suitable, safe containers for used oil.
- When completing a repair, make suitable provisions to stop the engine taking in air if, after start-up, an uncontrolled increase in engine speed were to occur.

CAUTION!



Do not carry out maintenance operations when the electric power supply is turned on: always check to ensure that the appliances are properly earthed. During diagnosis and maintenance operations, make sure that your hands and feet are dry, and whenever possible use insulating stands.

FREQUENCY

Controls	Frequency
Check oil level in engine	Daily
Check oil level in marine gear	Daily
Check engine coolant level	Daily
Check exhaust pipe/s for damage	Daily
Drain water from the fuel pre-filter	150 hours ⁽¹⁾
Check/top up electrolyte level in batteries and clean terminals	Half-yearly

The maintenance intervals indicated below take into account the typical working factors for various types of engine use; the most suitable interval for maintenance operations for the various applications will be indicated by the maintenance staff, according to the way and working conditions in which the engine is used.



Planned maintenance

Frequency

Clean air filter/s	300 hours ^{(2) (7)}
Check corrosion of zinc anodes	300 hours ^{(4) (7)}
Check state of oil vapour filter (indicator may be present)	300 hours ⁽⁷⁾
Drain/suck condensation from fuel tank/s	300 hours ^{(1) (7)}
Replace engine oil	600 hours ^{(5) (7)}
Check one-way valve efficiency pre-lubrication system	each time it is changed oil
Change oil filter/s	600 hours ^{(5) (7) (8)}
Change fuel filter/s	600 hours ^{(1) (7) (8)}
Change fuel pre-filter	600 hours ^{(1) (7)}
Change oil in the marine gear	see relevant details
Inspect sea chest	yearly
Check tension and state of belt	yearly
Change coolant	1200 hours or 2 years
Change air filter	2 years
Change oil vapour filter	2 years ⁽⁵⁾



Special maintenance

Frequency

Check wear in sea water pump rotor	900 hours
Check the efficiency of the pre-post heating system (if there is one)	1200 hours
Adjusting play in valves-rocker arms	1200 hours
Replace belt	1200 hours or 2 years
Clean heat exchangers	2 years ⁽⁶⁾
Cleaning the turbocharger	2 years ⁽⁵⁾

- 1) Maximum period when using good quality fuel, (EN 590 standard); this is reduced if the fuel is contaminated and alarms are triggered due to blockage of the filters and presence of water in the pre-filter. When blockage of the filter is indicated, it must be replaced. If the water in pre-filter indicator does not go out after drainage, the pre-filter must be replaced.
- 2) The frequency with which operations are carried out will depend on the working conditions and efficiency/wear of the product. If the engine is not used for long periods of time, check it before you start it.
- 3) N.C.
- 4) The anode must be replaced if corrosion has exceeded 50% of the volume of zinc.

- 5) Replace lubricants according to the frequency indicated in the REFUELLING table.
- 6) Sea water/combustion air heat exchanger: clean both the air and water sections; engine coolant/sea water heat exchanger: clean the sea water section; optional sea water/marine gear oil heat exchanger: clean the sea water section.
- 7) Must be performed annually, even if the required number of working hours are not reached.
- 8) Only use filters with the following characteristics:
 - filtration level $< 12 \mu\text{m}$
 - filtering efficiency $\beta > 200$.

WARNING

When using fuel with a percentage sulphur exceeding 0.5%, or when using oils that do not comply with the specifications provided in the refuelling table, the times at which the engine oil, engine oil filter and oil vapour filter must be changed will vary according to the use and working conditions of the engine itself; for further information, please consult the technicians responsible for maintenance.

REQUIREMENTS


1. Do not disconnect the batteries with the engine running.
2. Do not carry out arc welding operations in the vicinity of the engine without first removing electrical cables and electronic units.
3. After each maintenance operation involving disconnection of the battery/batteries, make sure that the terminals have been properly locked onto the poles.
4. Do not use battery chargers to start the engine.
5. Disconnect the on-board network battery/batteries when recharging.
6. Do not paint the appliances, components and electrical connectors equipping the engine.
7. Disconnect the battery/batteries before any electrical operations.
8. Contact the Boatyard before installing electronic equipped on board (two-way radios, echo-sounding equipped, etc.).

HOW TO PROCEED

Check oil level in engine

Only proceed with the engine stopped and at a low temperature, so as to avoid the risk of burning.

- Using the dipstick (1), check that the oil level is between the "Min" and "Max" levels.
- If the level is too low, top up through the inlet on the cylinder head, after first removing the relevant cap (2).

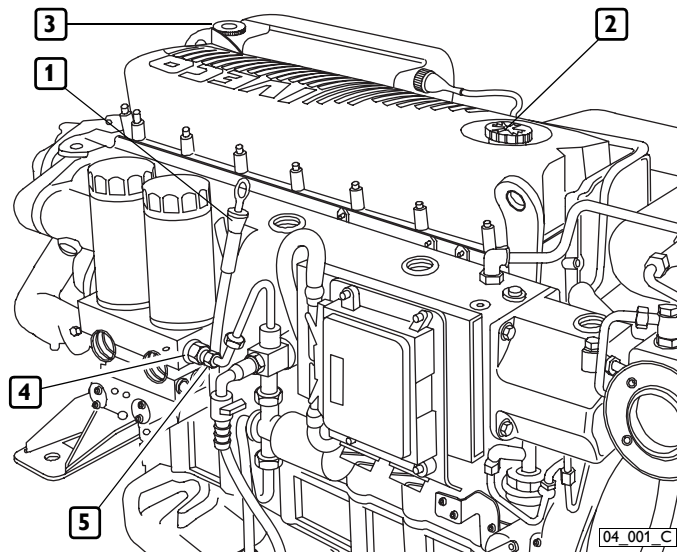

WARNING

- ❑ After topping up, make sure that the oil level does not exceed the "Max" limit marked on the dipstick.
- ❑ Make sure that the dipstick is inserted properly and the filler cap is turned in a clockwise direction until it stops turning completely.

Check oil level in marine gear

Check the oil level in the marine gear following the indications provided in the marine gear Manufacturer's manual.

Check coolant level

For M30 - M50 - M55 engines

Only proceed with the engine stopped and at a low temperature, so as to avoid the risk of burning.

- ❑ Remove the loading tank pressurisation cap (3 - previous page).
- ❑ Visually check the coolant level.
- ❑ Top up the tank if necessary, using a mixture of 50% clean water (not distilled) and Parafliu 11. (See REFUELLING table).

For M20 engines

If the engine is set up to use external heat exchangers (e.g. on the keel), the information regarding checks to be carried out on the cooling circuit must be provided by the Boatbuilder who constructed the vessel.

Check exhaust pipe/s for damage

Visually check that the exhaust system is not blocked or damaged.


- ❑ Make sure that there is no risk of dangerous fumes within the vessel. Contact the Boatyard if necessary.

Draining water from the fuel pre-filter

The high risk of refuelling with fuel that is polluted by foreign bodies and water means that it is necessary to perform this control even if no alarm is shown on the on-board control panel.

Proceed with the engine stopped.

- ❑ Place a container under the pre-filter to collect the fluid.
- ❑ Unscrew the tap plug (1) in the bottom part of the pre-filter; in some lay-outs the plug includes a sensor to detect the presence of water in the diesel.
- ❑ Drain off liquid until only "diesel" can be seen".
- ❑ Close the plug again, tightening it completely by hand.
- ❑ Dispose of the drained fluids according to current requirements.

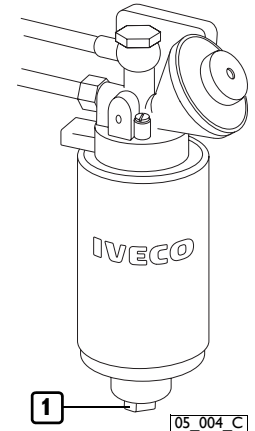

Checking the level of electrolyte solution in the batteries


Place the batteries on a level surface, then proceed as follows.

- ❑ Visually check that the fluid level is between the "Min" and "Max" limits; in the absence of references, check that the fluid covers the Lead plates inside the elements by approximately 5 mm.
- ❑ If necessary, top up with distilled water only those elements in which the level is at minimum.
- ❑ Contact specialised technical staff if the battery needs recharging.
- ❑ Have the efficiency of the battery recharging system tested if a voltage of less than 22 V is detected with the engine running.
- ❑ On this occasion, make sure that the terminals and clamps are clean, properly locked and protected by vaseline.

CAUTION!



- ❑ *The batteries contain sulphuric acid, which is extremely caustic and corrosive; always wear protective gloves and goggles when topping them up. Whenever possible it is recommended that this control be carried out by specialised personnel.*
- ❑ *Do not smoke or use live flames near the batteries during controls, and make sure that the room you are working in is adequately ventilated.*

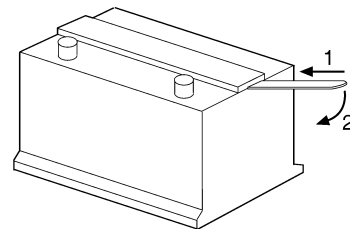


04_362_N

Some types of battery have a single cover for all the inspection plugs. To access the elements, use a lever as shown in the figure.

Cleaning the air filter

- Remove the filter by loosening the screws (1) indicated in the figure.
- Blow dehumidified compressed air through the filter element, from the inside outward (maximum pressure 200 kPa), or wash with water only. Do not use detergents; **do not use diesel**.
- Replace the filter if any tears are found.
- Replace the filter once every 2 years.
- Restore normal operating conditions after positioning the filter in its housing.

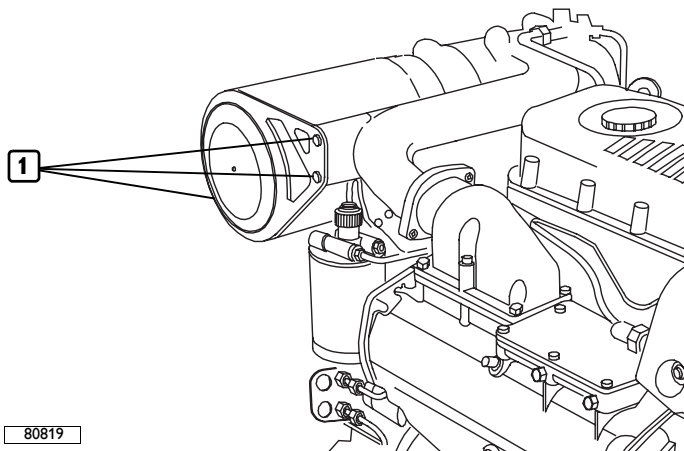

Check corrosion of zinc anodes

Only proceed with the engine stopped and at a low temperature:

- Provide suitable containers to ensure that no water is dispersed inside the vessel during removal of the anodes.
- Remove the anodes, unscrewing them from their housings (see location in the section ENGINE TECHNICAL DATA).
- Make sure that corrosion has not exceeded 50% of the volume of zinc. If this is the case, change them.
- Replace the anodes in their housings, locking them to the prescribed torque.

Check state of oil vapour filter

Only proceed with the engine stopped and at a low temperature, so as to avoid the risk of burning:


- Refer to the indications provided to replace the filter, making sure that there are no deposits on the filter element.

Replace engine oil

Only proceed with the engine stopped and at a low temperature, so as to avoid the risk of burning.


In the presence of a hand pump only:

- ❑ Place a container under the hand pump (3) outlet pipe (2), to collect the used oil.
- ❑ Open the drainage tap by turning the lever (1) to the vertical position **B**.
- ❑ Unscrew the filler cap, turn the hand pump provided (3), which is set up to extract the oil only, until the oil sump is completely empty.
- ❑ Fill up with fresh oil through the feeder hole on the timer cover, taking care to use the types and amounts of oil indicated in the table REFUELLING. Screw down the filler cap.
- ❑ Using the dipstick (4), check that the oil level is between the "Min" and "Max" levels.
- ❑ Close the drainage tap, by returning the lever (1) to the horizontal position **A**.
- ❑ Dispose of used oil according to current requirements.

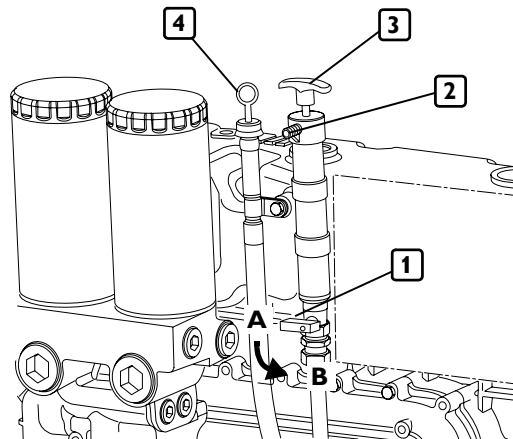

05_005_C


Detail of the electric transfer system

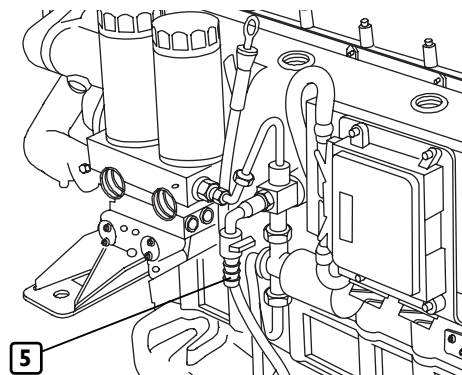

04_001_C

In the presence of an electric transfer system (opt.)


Oil emptying and filling operations are carried out using the button on the relevant electronic module control panel; for safety reasons the commands are only enabled with the start/stop key switch in position 8A (stop).

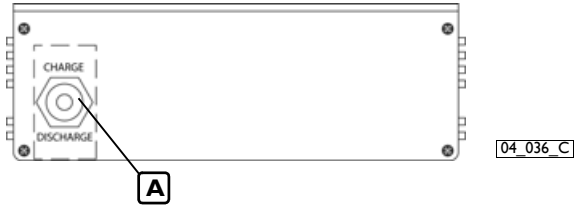

- Place a container under the system filler/drainage tap (5 on previous page) to collect the used oil.
- Open the tap and press button (A) on the control panel in the DISCHARGE direction, until the sump is completely empty.
- Connect the tap to the container holding the oil to be charged, and press the button on the control panel in the CHARGE direction until the required amount has been inserted.
- Dispose of used oil according to current requirements.

In the presence of an electric pre-lubrication and transfer system (opt.)

Oil emptying and filling operations are carried out using the commands on the relevant electronic module control panel; for safety reasons the operation is only allowed with the start/stop key switch in position 8A (stop).

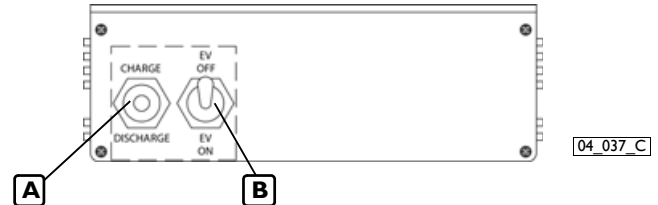

- Place a container under the system filler/drainage tap (5 on previous page) to collect the used oil.
- Turn switch EV OFF/EV ON (B) to the EV/ON position, so that the electric pump is connected to the inlet/outlet tap.
- Open the tap and turn button (A) on the control panel in the DISCHARGE direction, until the sump is completely empty.
- Connect the tap to the container holding the oil to be charged, and press the button on the control panel in the CHARGE direction until the required amount has been inserted.
- Return switch EV OFF/EV ON (B) to the EV/OFF position, to allow normal operation of the pre-lubrication system.
- Dispose of used oil according to current requirements.

Check the efficiency of the pre-lubrication system one-way valve (picture on page 27)

Start the check with the engine stopped

- ❑ Loosen the connector (5) and wait for the oil to finish draining out of the pre-lubrication pipe.
- ❑ Start the engine and check that no lubricant comes out of the one-way valve (4).
- ❑ Stop the engine and lock the connector.
- ❑ Should any oil seep out, replace the valve.

CAUTION!



Proceed with extreme caution, given the presence of moving parts. Always wear suitable personal protection equipped.


Change oil filters

Only use filters with a filtration level equivalent to the ones you are replacing (see section FREQUENCY).

In the presence of traditional filter supports

Only proceed with the engine stopped and at a low temperature, so as to avoid the risk of burning, and preferably after having drained the used oil.

- ❑ Place a container under the filter support (1), to collect the used oil.
- ❑ Unscrew and remove the filters.
- ❑ Clean all surfaces carefully.
- ❑ Damp the new filter seals with a thin layer of oil.
- ❑ Hand screw the new filters into place until the seal gasket touches the support, then lock by a further 3/4 of a turn.
- ❑ Dispose of the used filters according to current requirements.

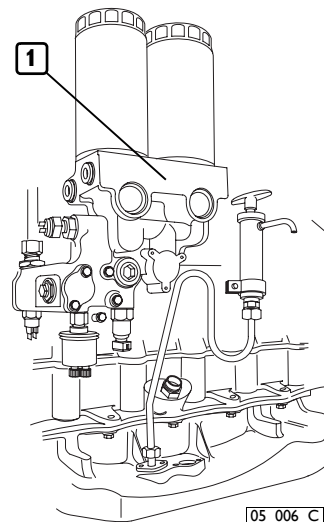


In the presence of filter supports with disable levers (opt.)

The support with disable levers means that, if necessary, a filter can be replaced even with the engine turning.

CAUTION!



Proceed with extreme caution, given the high temperature of the fluid and the presence of moving parts. Always wear suitable personal protection equipped.

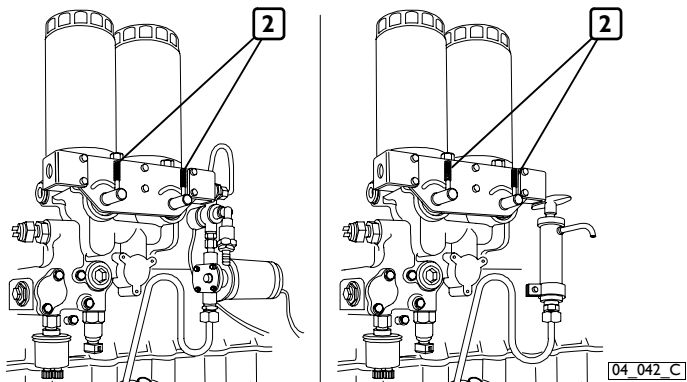

Turn the handle (2) corresponding to the filter you wish to replace to the "CLOSED" position, as shown in the plates provided.

- Proceed as illustrated above for the traditional filter support.

CAUTION!



Simultaneous disabling of both filters must be avoided at all costs.

Changing the fuel filter

Only proceed with the engine stopped and at a low temperature, so as to avoid the risk of burning.

Only use filters with a filtration level equivalent to the ones you are replacing (see section FREQUENCY).

In the presence of traditional filter supports

- Remove the filter (1) by unscrewing it.
- Damp the new filter seal with diesel or engine oil.
- Hand screw the new filter into place until the seal gasket touches the support, then lock by a further 3/4 of a turn.


The system does not require bleeding to remove air.

WARNING

Do not fill up the new filter before it is fitted to the support: this avoids the risk of inserting harmful impurities into the injection system and circuit.

NOTE: should it be necessary to accelerate the automatic bleeding phase, loosen the manifold on the cylinder head (2) during the initial phases of start-up.

Ensure that any fuel coming out of the manifold is not dispersed into the environment.

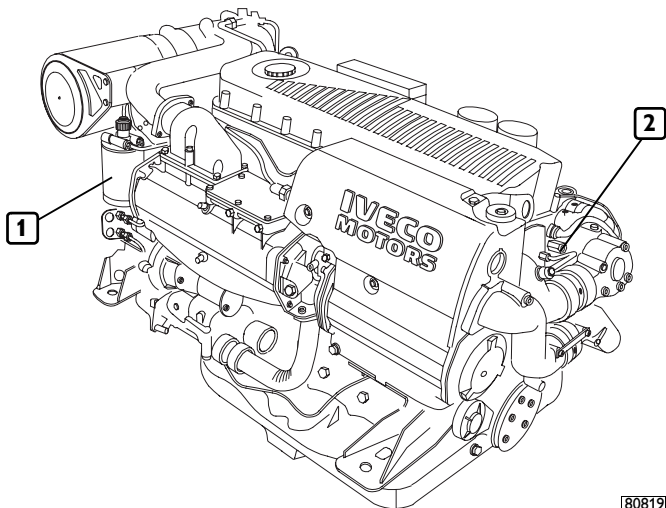


80819

In the presence of filter supports with switching lever (opt.)
 The support with switching lever means that, if necessary, the filters can be replaced even with the engine turning.


- Switch the lever (3) to position A and replace filter (5).
- Switch the lever (3) to position B and replace filter (4).

- The instructions for replacement are similar to those illustrated above for the traditional filter support.
- Return the lever (3) to the central position.

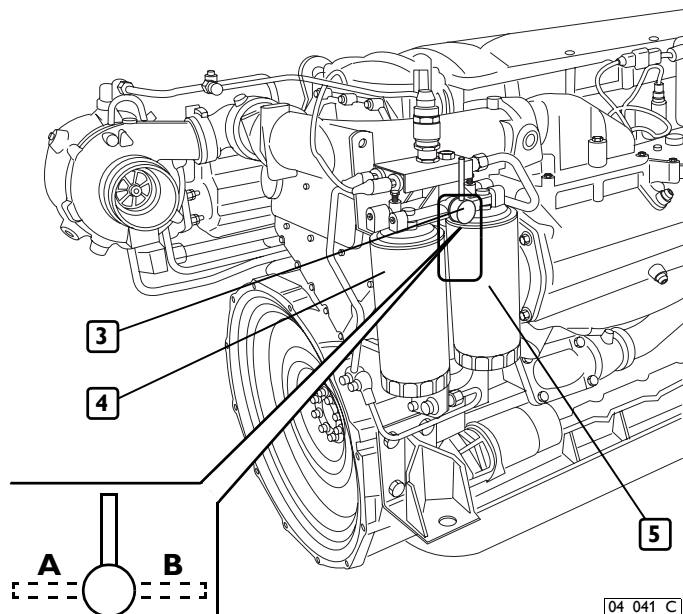

04_041_C


Comply with the warning and the note on bleeding given above for the traditional filter support.

CAUTION!	
	<p><i>Proceed with extreme caution, given the high temperature of the fluid and the presence of moving parts. Always wear suitable personal protection equipped.</i></p>

Changing the fuel pre-filter

Only proceed with the engine stopped and at a low temperature, so as to avoid the risk of burning.

- ❑ Remove the pre-filter by unscrewing it.
- ❑ Check that the new filter has performance levels that satisfy the needs of the engine (e.g. by comparing them with the old one).
- ❑ Damp the new filter seal with diesel or engine oil.
- ❑ Hand screw the new filter into place until the seal gasket touches the support, then lock by a further 3/4 of a turn.
- ❑ Use the hand pump (1) on the pre-filter support to fill the supply circuit.
- ❑ Start the engine and run it at minimum speed for a few minutes to eliminate any residual air.

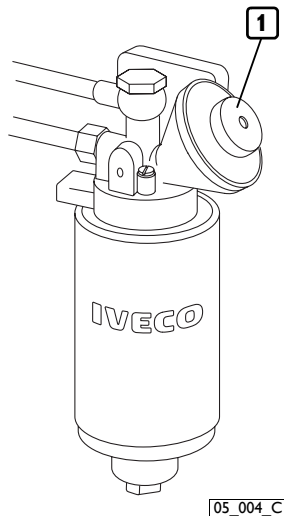


05_004_C

Check tension and state of the auxiliary member drive belt

Only proceed with the engine stopped and at a low temperature, so as to avoid the risk of burning.

- ❑ Remove the casing protecting the pulleys.
- ❑ Check that the pulleys are not torn or worn, and that there are no lubricants or fuel on them. If this is not the case, replace them.
- ❑ At the same time, make sure that the tensioning device is working properly, proceeding as indicated in the figure.
- ❑ Replace the guard casing in its housing, and lock all the seal elements.

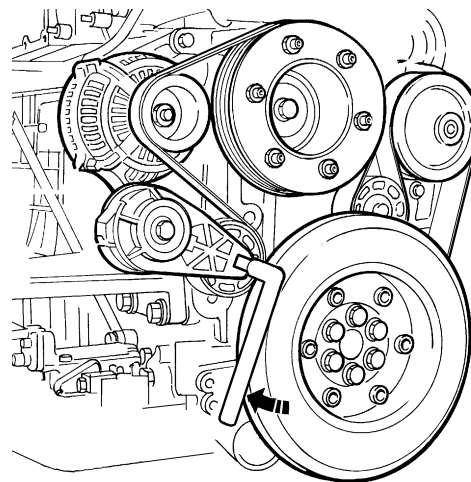

80870

Replace coolant


Only proceed with the engine stopped and at a low temperature, so as to avoid the risk of burning.

- ❑ Provide suitable containers to ensure that no coolant is dispersed into the environment.
- ❑ Remove the plugs on the circuit components and wait until the circuit has drained completely (the location of plugs is given in the section ENGINE TECHNICAL DATA). After emptying, replace the plugs in their housings, making sure that the seal rings are all undamaged.
- ❑ Fill up the circuit as indicated in the table REFUELLING.
- ❑ Bleed the circuit and top-up if necessary, as indicated in the section INDICATIONS FOR INITIAL START-UP.

Change oil vapour filter

Only proceed with the engine stopped and at a low temperature, so as to avoid the risk of burning.

- ❑ Unfasten the screws and remove the cover (1) to the filter compartment.
- ❑ Remove the filter (2), and dispose of it according to current requirements.
- ❑ Insert the new filter and relevant gasket, taking care that it is fitted the right way round, i.e. with the metal reinforcements (3) facing outwards.
- ❑ Replace the cover over the compartment.

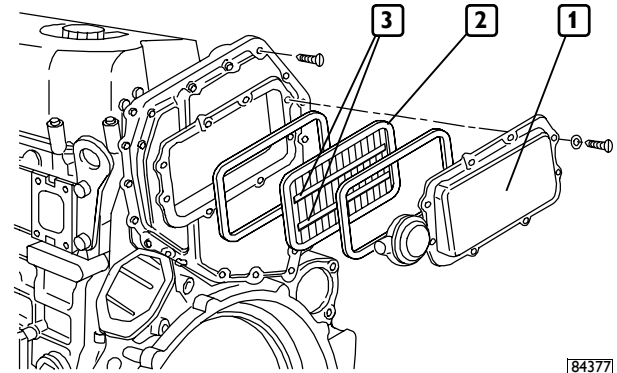

84377

CAUTION!



The filter (2) only filters effectively in one direction, and it must be fitted into its housing with the two metal reinforcements (3) facing out, as shown in the figure.



WARNING

The operations listed below must only be carried out by qualified staff from the IVECO MOTORS Service Centres or by staff from the Boatbuilders.

The methods used to perform them are described in the Technical and Repair Manuals.

Drain/suck condensation from fuel tank/s

Inspect sea chest

Check wear in sea water pump rotor

Check the efficiency of the pre-post heating system

Adjust play in valves-rocker arms

Clean the heat exchangers

Clean the turbocharger

The method used to change the oil in the marine gear is indicated in the relevant documentation supplied by the Manufacturer of the marine gear itself.

MOVING THE ENGINE

The operations necessary to embark and disembark the engine must only be carried out by technicians from Authorised Service Centres. When lifting the **engine only**, use the U-bolts indicated in this manual in the section ENGINE TECHNICAL DATA and marked on the engine with special stickers.

Lifting must be carried out using a rocker arm that keeps the metal cables supporting the engine parallel, using all the U-bolts provided simultaneously; the use of a single U-bolt only is not allowed. The engine lifting system must have a capacity and size suited to the weight and dimensions of the engine; check that there is no interference between the lifting system and the engine components.

Do not lift the engine before removing the transmission members that are coupled to it.

DISPOSAL OF WASTE

The engine unit is made up of parts and elements that, if discarded, may cause damage to the environment. The materials listed below must be handed over to specialised Collection Centres; the laws in force in the various Countries foresee severe penalties for transgressors:

- Starter batteries.
- Used lubricants.
- Mixtures of water and antifreeze.
- Filters.
- Additional cleaning materials (e.g. greasy or fuel-soaked cloths).

■ LONG PERIODS OF INACTIVITY

PREPARING THE ENGINE FOR A LONG PERIOD OF INACTIVITY

In order to prevent oxidation of the internal parts of the engine and of certain components in the injection system, when the engine is expected to be inoperative for periods of more than two months, the following operations must be carried out in preparation for this:

1. Drain the lubricant from the sump, after first warming up the engine.
2. Fill the engine with protective oil type 30/M (or alternatively oil that complies with MIL 2160B type 2 specifications), up to the "minimum" level indicated on the dipstick. Start the engine and keep it running for approximately 5 minutes.
3. Drain the fuel from the injection circuit, from the filter and from the injection pump pipes.
4. Connect the fuel circuit to a tank containing CFB (ISO 4113) protective fluid, and feed in the fluid by putting the circuit under pressure and running the engine for approximately 2 minutes, after first disabling the injection system. This operation can be performed by polarising terminal 50 of the starter motor with a positive voltage equivalent to the rated voltage of the system, using a conductor provided for that purpose.
5. Nebulise approximately 80 g of 30/M protective oil (10 g per litre displacement) into the turbocharger suction inlet, during the pressurised filling operation described in the previous point.
6. Close all the suction, delivery, ventilation and bleeder openings in the engine with suitable plugs, or seal them with adhesive tape.

7. Drain the residual 30/M protective oil from the sump. This oil can be used again for a further 2 preparation operations.
8. Fit signs reading ENGINE WITHOUT OIL to the engine and to the on-board control panel.
9. Drain the coolant, if it has not been mixed with suitable antifreeze and corrosion inhibitors, and affix a sign to indicate the fact.

In the event of prolonged inactivity, the operations described must be repeated every 6 months, following the procedure given below:

- A) drain the 30/M protective oil from the sump;
- B) repeat the operations described from point 2 onward

Should you intend to protect external parts of the engine, proceed by spraying OVER 19 AR protective liquid on unpainted metal parts, such as the flywheel, pulleys and the like, avoiding belts, connector cables and electrical equipped.


RESTARTING THE ENGINE AFTER A LONG PERIOD OF INACTIVITY

1. Drain the residual 30/M protective oil from the sump.
2. Fill the engine, as prescribed, with lubricant of the type and amount indicated in the table REFUELLING.

3. Drain the CFB protective fluid from the fuel circuit, carrying out this operation as indicated under point 3. of PREPARING THE ENGINE FOR A LONG PERIOD OF INACTIVITY.
4. Remove the plugs and/or seals from the suction, delivery, ventilation and bleeder openings in the engine, restoring it to a normal state of use. Connect the turbocharger suction inlet to the air filter.
5. Connect the fuel circuits to the vessel's fuel tank, completing the operations as indicated in point 4. of PREPARING THE ENGINE FOR A LONG PERIOD OF INACTIVITY. During filling operations, connect the fuel return pipe to a collection tank, so as to prevent any residual CFB protective fluid from flowing into the vessel's fuel tank.
6. Check the engine and fill it up with coolant as prescribed.
7. Start the engine and keep it running until the idling speed rate has stabilised completely.
8. Check that the instruments on the on-board control panel/s are showing plausible values, and that no alarms are shown.
9. Stop the engine.
10. Remove the ENGINE WITHOUT OIL signs from the engine and from the on-board control panel.

INDICATIONS FOR INITIAL START-UP AND START-UP AFTER A LONG PERIOD OF INACTIVITY

1. Fill up the engine as prescribed in the table REFUELLING.

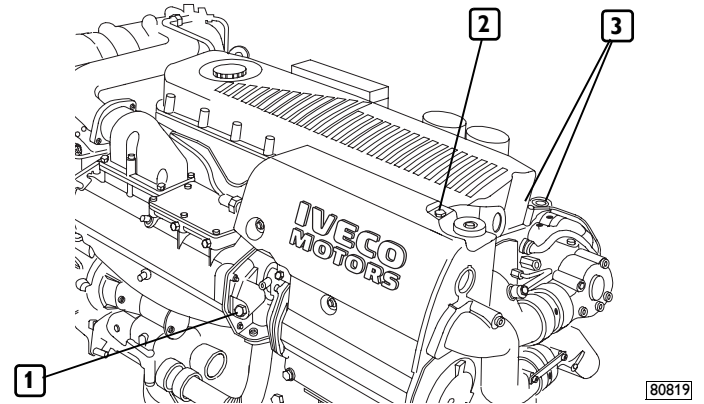

2. Remove the sacrificial anode (1) and pour 1.5 litres of water into the hole. This is necessary to allow the sea water pump to draw (valid for engines with a centrifugal type pump).
3. Replace the sacrificial anode in its housing, locking it to the prescribed torque.
4. Bleed the cooling circuit as follows:
 Keeping the engine running at minimum speed, carefully loosen the screw (2) on the coolant tank alongside the cap, and the two screws (3) on the drainage manifold, to encourage any air bubbles to escape. When the operation has been completed, tighten the screws to the prescribed torque, stop the engine and check the coolant level again, topping up if necessary. Ensure that any fluid coming out is not dispersed into the environment.

■ ENGINE MALFUNCTIONS

The electronic unit overseeing management and control of all operation of the engine is capable of recognising any malfunctions that may occur, and of adopting strategies that will allow you to navigate in full safety.

The event, signalled by light-up of the EDC MALFUNCTION indicator on the on-board control panels, results in programmed limitation of power within certain thresholds, set according to the severity of the case.

In the case of temporary malfunctions the reduction in performance will remain in force until the engine is stopped.

Accelerator electronic circuit malfunction

Recognition by the CENTRAL ELECTRONIC UNIT of certain problems in the accelerator electrical circuit involves the adoption of strategies known as “Accelerated minimum speed running” that will enable navigation to continue in emergency mode.

The possible operating modes are as follows:

- A.** The accelerator lever does not “respond”: the running speed stabilises at 750 rpm. to allow the vessel to proceed slowly and be manoeuvred simply by turning the marine gear on and off, **without accelerating**.
- B.** The accelerator lever “responds partially”: the minimum running speed is set to 750 rpm. When the accelerator lever is moved to approximately half way, the speed gradually increases up to 2000 rpm.; when the lever is returned to minimum the speed rapidly decreases to 750 rpm.

CAUTION!



The engine electronic control unit can adopt safety strategies at any time during navigation, should conditions arise that are considered to put the engine at risk. When conditions of this kind occur, proceed with the greatest possible care and attention, first making sure that all those on board are secure and holding on to safe hand-holds.

NOTE: In mode “**A**” it is possible to proceed at speeds higher than the accelerated minimum, managing start/stop, acceleration and deceleration functions as illustrated in the section MANAGING THE ENGINE FROM THE RELAY BOX. Should it be necessary to operate the engine as above, **always comply with the accident prevention rules** provided in the Section “Controls and maintenance.

CAUTION!



*Management of the engine from the “Relay box” involves inhibition of the bridge controls; as a result of this, **when running the vessel from the bridge, the only way to stop propeller thrust in the engine quickly** is using the marine gear disengagement lever*

■ EMERGENCIES ON BOARD

The user of a vessel that has been constructed according to safety regulations, when following the instructions provided in this manual and the indications given on the engine labels, will be working in safe conditions.

Should improper conduct result in accidents, always request the intervention of trained first aid specialists immediately.

In an emergency and while awaiting the arrival of first aid specialists, follow the instructions given below.

Engine malfunctions

When navigating with a malfunctioning engine, take the greatest possible care when manoeuvring and make sure that all those aboard are holding firmly to safe hand-holds (see section on ENGINE MALFUNCTIONS).

In case of fire

Extinguish the fire using the fire-fighting equipment provided aboard, and in the manner indicated by Fire prevention authorities (the fire-fighting equipment required on board is compulsory under current safety legislation).

Burns and scalds

1. Extinguish any flames on the burned person's clothing, by:
 - throwing water over them;
 - using a powder fire-extinguisher, without directing the jet at the person's face;
 - covering with blankets or rolling the victim on the ground.
2. Do not attempt to remove pieces of clothing that may have stuck to the skin.
3. In the case of scalding, immediately but carefully remove any clothing that may be soaked in the hot liquid.
4. Cover the burn with a special burn dressing or sterile bandage.

Carbon monoxide intoxication (CO)

Carbon monoxide from the engine exhaust is without smell, and is dangerous both because it causes intoxication, and because when combined with air it forms an explosive mixture.

In closed rooms, carbon monoxide is extremely dangerous, as it can reach critical concentrations within a very short time.

When assisting an intoxicated person in a closed room:

1. Ventilate the room immediately, to reduce the concentration of gas.
2. When entering the room, hold your breath, do not light flames, lights or ring electric doorbells or phones, to avoid the risk of explosion.
3. Carry the intoxicated person out into the fresh air or into a well ventilated room, resting him on one side if he is unconscious.

Electrocution

The engines' electrical 12 V or 24 V electrical system does not involve the risk of electrocution, however, in the event of a short-circuit caused, for example, by a metal tool, there is a risk of burning due to overheating of the object through which the electrical current runs. In these circumstances:

1. Remove the object that caused the short-circuit, using means that provide sufficient heat insulation.
2. Switch off the power at the main switch, if there is one.

Injuries and fractures

The vast number of possible circumstances and the specific nature of operations required means that the intervention of a medical team is necessary.

1. In the event of bleeding, keep the edges of the wound pressed together until help arrives.
2. If there is any suspicion of a fracture, do not move the injured part and only move the patient if absolutely necessary.

Caustic burns

Caustic skin burns are caused by contact with extremely acid or alkaline substances.

For electric maintenance technicians these are typically caused by acid from batteries; in these circumstances, proceed as follows:

1. Remove any clothing soaked in the caustic substance.
2. Wash the area with lots of running water, avoiding parts that have not been burned.

If either battery acid, lubricants or diesel come into contact with the eyes: wash the eyes with water for at least 20 minutes, keeping the eyelids open so that the water flows over the eyeball (move the eye in all directions to wash more thoroughly).

